



## Step Up

1713,1714

**DESIGN** Nofred



EN

**WARNING!**  
**IMPORTANT! KEEP FOR FUTURE REFERENCE**

**CHOKING HAZARD!** Small parts. Not for children under the age of 3.

**CAUTION!** Adult assembly required. Be careful when opening the package. Contains small parts hazardous to children under 3 years of age in unassembled stage.

This product is lab test certified in accordance with EU REACH regulations. And does not include nor exceed chemical substance limits set by the EU.



 
 
DK

**ADVARSEL!**  
**VIGTIGT! BEHOLD FOR FREMTIDIG REFERENCE**

**RISIKO FOR KVÆLNING!** Indeholder smådele. Anbefales ikke til børn under 3 år.



**ADVARSEL!** Skal samles af en voksen. Emballagen skal åbnes forsigtigt. Indeholder små dele, der er farlige for børn under 3 år, når produktet ikke er samlet.

Dette produkt er laboratorietestcertificeret i overensstemmelse med EU's REACH-regler. Og omfatter ikke eller overskrider kemiske stofgrænser fastsat af EU.

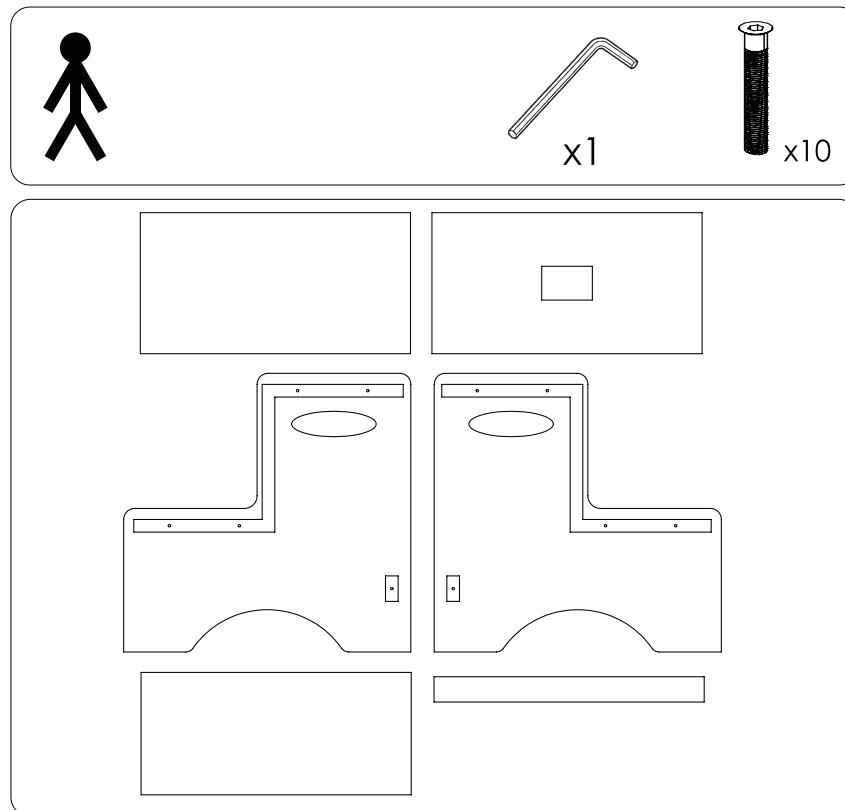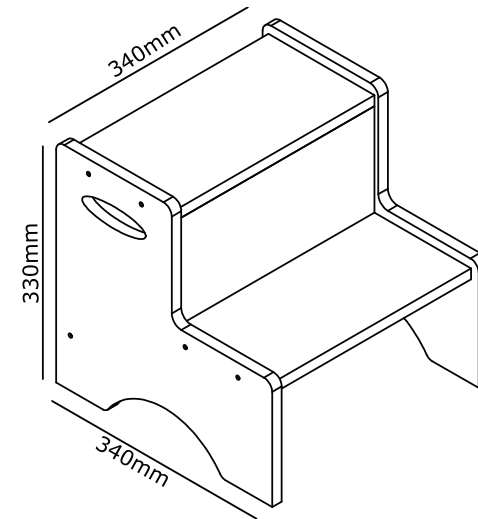



  **EN**  
**WARNING TO AVOID SCRATCHES!**  
 In order to avoid scratching this furniture should be assembled on a soft layer

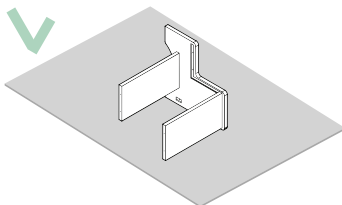

**DK**  
**ADVARSEL FOR AT FORHINDRE RIDSER!**  
 For at forhindre ridser skal dette møbel samles på et blødt underlag



**EN**  
**WARNING!**  
**IMPORTANT! KEEP FOR FUTURE REFERENCE**

Please read the instructions carefully to ensure correct assembly.

Screwdriver (not included) is required for assembly.

Remember to retighten all the screws 2-3 weeks after you have assembled the step-up stool. And every couple of months afterwards.

Always keep the product away from open fires or other heat sources that may cause a risk of fire.

There is a risk for the product to tip over while in use. That is why a child must never be left unattended. Especially around heat sources, open windows, and low hanging objects such as curtains.

Never use the product should it be damaged or missing a part.

**MAINTENANCE AND CLEANING:** Wipe the product with a clean damp cloth; all excess water should be wiped off. Detergents are not recommended. Please note - Exposure to direct sunlight may cause slight changes of color to the product. Please be aware of differences in the wood as it is a natural material.



**DK**  
**ADVARSEL!**  
**VIGTIGT! BEHOLD FOR FREMTIDIG REFERENCE**

Venligst læs samlemanualen omhyggeligt, således produktet bliver samlet korrekt.

Skruetrækker (medfølger ikke) er påkrævet til montering.

Husk at til spænde alle skruer efter 2-3 ugers brug af skamlen! Og hver anden måned efterfølgende.

Sæt aldrig produktet i nærheden af åben ild eller andre varme kilder, der kan forårsage brandfare.

Der er risiko for, at produktet tipper over under brug. Derfor må et barn aldrig efterlades uden opsyn. Især omkring varmekilder, åbne vinduer og lavthængende genstande som gardiner.

Anvend aldrig produktet, hvis det enten er defekt eller mangler dele.

**VEDLIGEHOLD OG RENGØRING:** Produktet rengøres med en fugtig klud. Alt overflødig vand bør tørres af hurtigst muligt. Rengøringsmidler anbefales ikke. Venligst vær opmærksom på; Direkte sollys kan forårsage ændringer i farven. Vær opmærksom på træ er et naturmateriale, forskelligheder kan forekomme.

