

MONO

- Care instructions -

Fabric

When brand new, the fabric will seem relatively tight. As you use the furniture, the fabric and the foam just beneath the fabric will expand relatively quickly, which can cause wrinkles on the fabric. This will typically happen within the first month, depending on how much the furniture is used. With time, the material will stiffen and expand to a lesser extent.

Wrinkles naturally occur from normal use and love of this product. In order to avoid excess wrinkles, the fabric should be straightened. Lightly use your hand to “smooth down the fabric, in an “ironing” motion. This way any excess material can be redistributed across the cushion.

General Care

Sofas with soft fillings and foam cores should be regularly fluffed and shaped to maintain their comfort and appearance. This applies to both the outer layers and the core of the cushion. Using a flat hand, gently pat or hit the cushions on all available sides to redistribute the filling, push air back in, and help the cushions retain their shape. Regular care helps prevent flattening and uneven wear over time.

Change routines

The upholstery on your sofa will change with usage and time. Therefore it's important to try sitting on all parts of the sofa and change your position frequently to avoid uneven wear on the fabric.

Regular care

Remove dust and foreign particles from the sofa, by using a clean lint-free cloth and lint rollers. Don't forget to vacuum your upholstered with a soft furniture nozzle. It's important to work seam to seam and always clean the entire sofa.

Annual/Semi-Annual care

Use fabric cleaners and recommended products, for a longer-lasting sofa. We recommend using a textile protector to refresh the fabric every 6-18 months. Always follow the recommendations on the product you are using.

With the proper care your sofa will retain its elegance and comfort for many years to come. We hope you will enjoy your Decotique Mono sofa and that our care instructions will assist you in taking care of the sofa in the best possible way. If you have any further questions or need any advice please contact our customer service.

MONO

- Care instructions -

Fabrics *Steam White, Clay Beige 96% PES 4% PAC*

- The fabric has a boucle texture
- If you get a stain first try using a lint-free cloth with some lukewarm water and carefully rub the affected area. For more persistent stains mix 250ml of water with 2-3 drops of a mild detergent for cleaning.
- Avoid sharp objects such as zippers, rivets, etc as they may impact the fabric. Never pull or cut on loose thread or loop, the varied size of loops will give the fabric an increased texture
- Avoid direct sunlight.
- For extra protection from stains and UV light we recommend using a textile protector.
- To minimize foreign fibers we recommend that you regularly vacuum clean the fabric with a soft brush/nozzle.
- Use a lint roller to quickly and efficiently remove foreign fibers and particles
- Avoid direct contact with other fibers and materials which can release fibers or colors, such as fleece or knitted garments, this is a part of the natural charm of the fabric and is not considered a defect.

Martindale	Pilling	Color fastness to light	Color fastness to rubbing
75 000	4	5	5