 
Battery replacement Flowerpot VP9





Please read these instructions carefully and retain them for future reference to ensure that the battery is changed correctly. For your own safety, please study each step of this instruction manual first. & Tradition is not responsible for any faults or damages caused by not following these instructions correctly. Do not modify this product in any way.

Safety precautions

- Dispose of plastic bag from packaging and do not allow children to play with it.
- Keep product well out of children's reach.
- Consult a professionally qualified electrician if in any doubt.

Tools needed

- Screwdriver


Important

&Tradition will not take any responsibility for accidents or injuries that occurs due to use of incorrect battery.

The battery must be removed from the lamp before it is scrapped; the appliance must be disconnected from the supply mains when removing the battery; the battery must be disposed safely.


Step 1

Place the lamp horizontally on a smooth surface so it doesn't get scratched. To replace the battery, start by removing the foam foot under the base. It's only necessary to remove the foam foot opposite the USB input, as shown on the illustration.

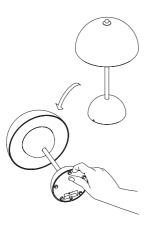


Step 2

Remove the screw using a screwdriver.

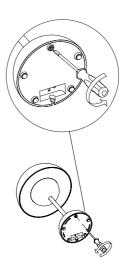


Step 3

Turn the base slightly clockwise and carefully pull out the base of the lamp, taking into consideration that there are cables connected to it. No tools needed.

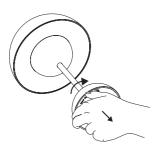

Step 4

 Apply pressure on the little white box (where the end of the battery cables fit) while you grab the plastic end of the cables and pull it out from the box. No tools needed.



Step 5

Lift and pivot the upper lid that protects the battery. No tools needed.

Replace the battery with a new &Tradition battery.

