



CUBE SLING DINING CHAIR

- We recommend two people be on hand for this assembly-

Tools required:
-4mm allen key (included)

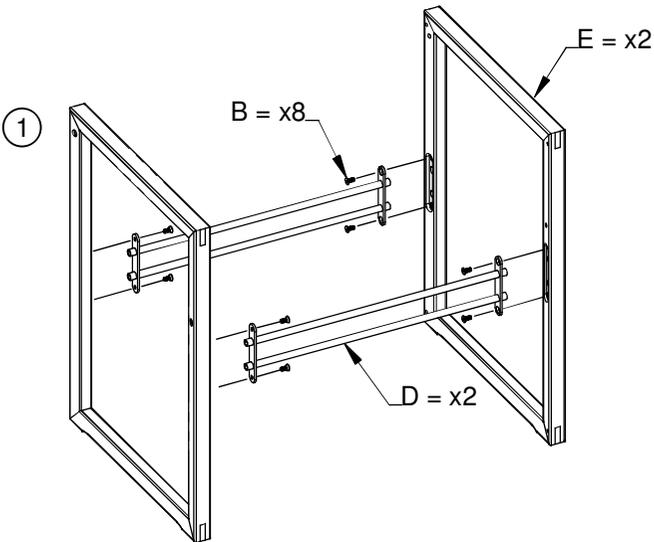


1. Secure the four stainless steel tubes in place using the supplied allen key and 8pcs M6x16mm bolts - Do not fully tighten the bolts, instead secure them loosely in place with two turns only

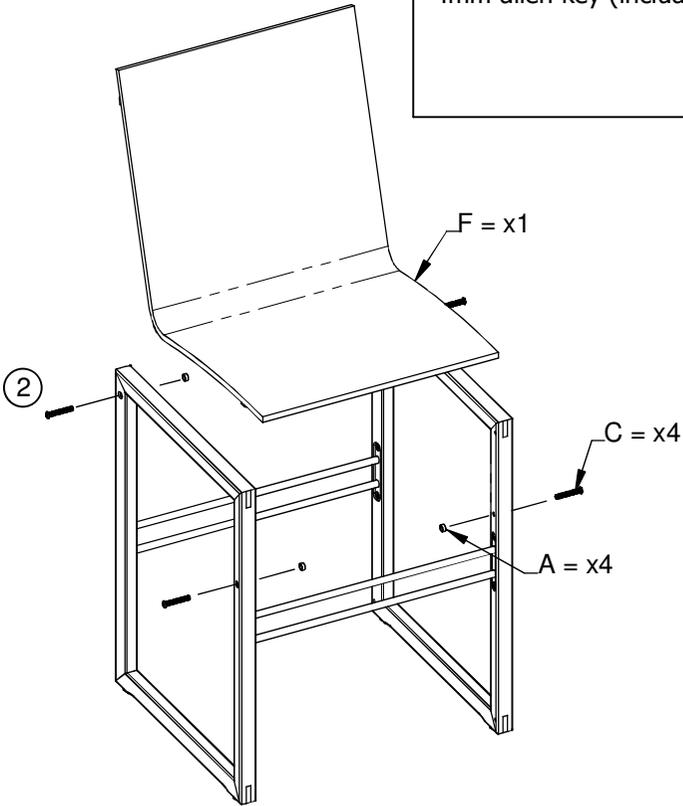


2a. Line the seat/back assembly up with the 4 upper holes in the teak frames and secure them loosely in place (two turns only) with the custom bolt M8x50mm - Note that there must be Ø12x7mm spacers between the teak frames and the seat assembly

2b. Tighten the 8pcs M6x16mm bolts fully, followed by the tightening the four M8x50mm bolts


(A) Spacer Ø12x7mm

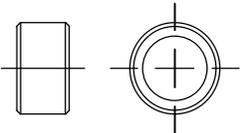

(B) Bolt Insex Screw M6x16mm

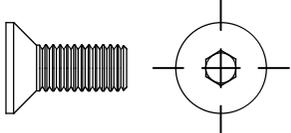

(C) Custom Bolt M8x50mm

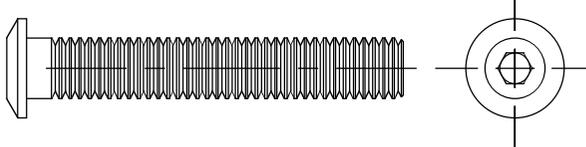

(D) Stainless Steel Tube Assembly

(E) Teak Side Frame

(F) Seat Assembly