


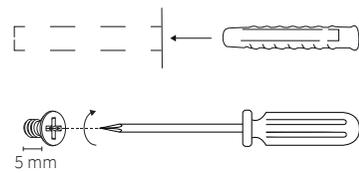


- ② Insert rawplugs in all six holes and fasten the screws 5 mm from the wall.

Indsæt rawplugs i alle seks huller og skru skruerne i, så de er 5 mm fra væggen.



- ③ Place the pole on top of the screws and slide it downwards into place. Repeat with the other poles.

Placer stolpen vertikalt over skruerne, og skub den ned til den ikke kan komme længere. Gentag med de andre stolper.

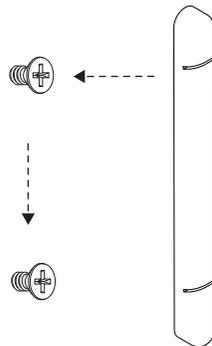

- ④ Place the first shelf in the slits on the poles, so the holes in the shelf is covered by the center of the slits.

Repeat with the other shelf.

Placer en hylde i rillerne på stolperne, så hullerne i hylde er centreret i rillen.

Gentag med den anden hylde.

