
GRAND 2-3 SEATER ASSEMBLY

INCLUDED IN THE PACKAGE:

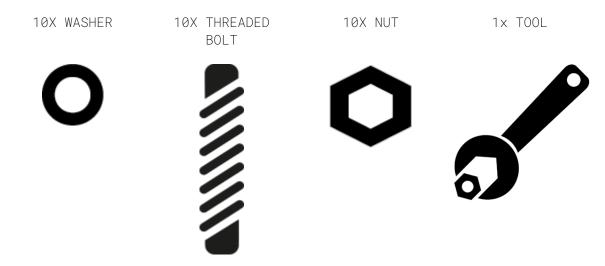

2 PERSONS RECOMMENDED FOR FASTER ASSEMBLY

- 1) PLACE THE SOFA FRAME ON A CLEAN SURFACE, FOR EASIER ASSEMBLY PLACE THE BACKREST FACING THE FLOOR
- 2) OPEN THE ZIPPER TO UNCOVER THE INSIDE OF THE MOUNTING HOLES
- 3) SCREW-IN BY HAND THE THREADED BOLTS INTO THE ARMREST
- 4) ALIGN THE BOLTS TO THE HOLES OF THE FRAME AND PUSH THE ARMREST TOWARDS THE FRAME
- 5) ADD ONE WASHER AND NUT TO EACH BOLT, START BY SCREWING THEM ON BY HAND
- 6) DON'T TIGHTEN EACH NUT INDIVIDUALLY, GO
 AROUND TIGHTEN EACH BOLT IN SEQUENCE TO GET
 A NICE FIT WITH THE ARMREST.
- 7) KEEP TIGHTENING THE BOLTS IN SEQUENCE UNTIL THE ARMREST AND FRAME HAVE A TIGHT FIT
- 8) MAKE ONE LAST ROUND TO TIGHTEN THE BOLTS
- 9) CLOSE THE ZIPPER
- 10) CAREFULLY TILT THE SOFA DOWN

